



Asbestos



*Let this magic mineral,
ASBESTOS,
protect the buildings
on your farm!*



Asbestos! The magic mineral of the Middle Ages. Today, still a "magic" mineral; fireproof, rot-proof, and practically indestructible. When combined with portland cement it is manufactured into products which are especially important on the farm, because they provide permanent protection against fire, weather, and wear. Read this folder. Learn how to put this magic mineral to work on your farm.



Asbestos in Buildings

- Asbestos was once used in more than 3,000 consumer products, some of which may still be in use, asbestos is not banned in all building materials.....Testing must be performed prior to renovation or demolition activities, no matter the age of building, new or old.
- In accordance with 40 CFR Part 61 Subpart M; EPA's Asbestos NESHAP (National Emission Standards for Hazardous Air Pollutants) for Public and Commercial Buildings and Structures, you must test or assume all suspect Asbestos Containing Building Materials (ACBM).

Common building materials that are suspected to contain asbestos

- Popcorn Ceiling Texture / Trowled-on Wall Textures
 - Suspended Ceiling Tiles / Glued-on Ceiling Tiles
 - Gray Felt Backing on Linoleum/Sheet Vinyl
 - 9x9 and 12x12 Vinyl Composite Floor Tile & Mastic
 - Sink Undercoat, Transite Countertops
 - Sheetrock Mud or Joint Compound
 - Hard Plaster with Skim or Finish Coat
 - Gray felt or thick Paper Wrap on Ductwork
 - Pipe, Boiler and Duct Insulation
 - Vibration Joint Cloth at Duct Joints
 - Fire Proofing / Fire Doors
 - Vermiculite Insulation (traces of Tremolite)
 - Roofing Materials, Transite Paneling
 - Window Glazing or Caulk
-



Asbestos in Buildings





Asbestos in Buildings






Asbestos in Buildings





Asbestos in Buildings



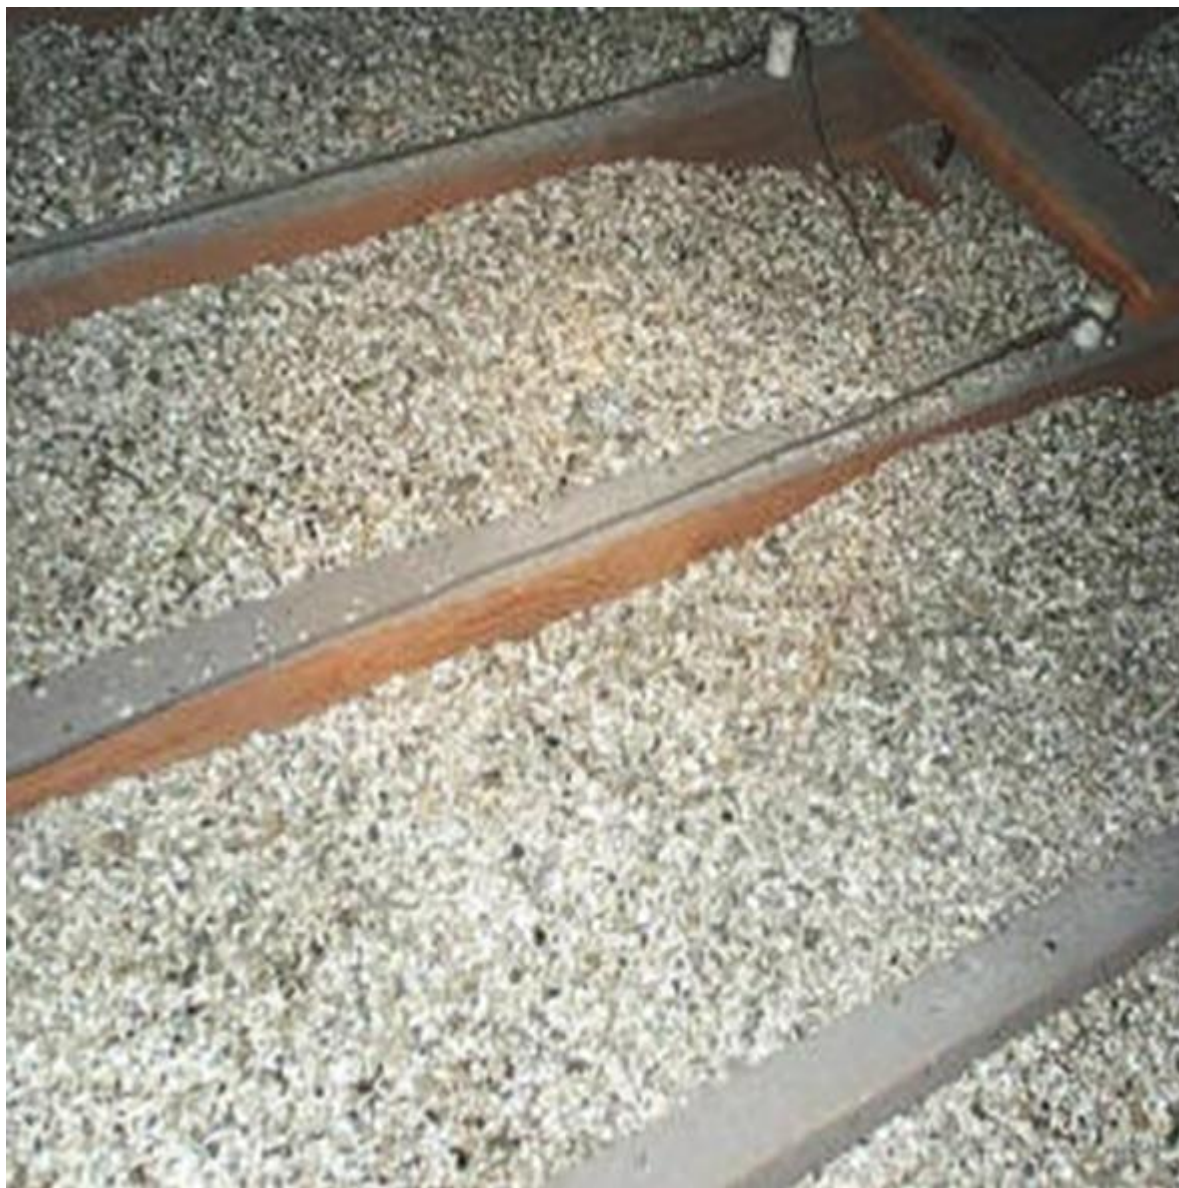

Asbestos in Buildings



Asbestos in Buildings





Asbestos in Buildings



Asbestos in Buildings





Asbestos in Buildings

